




Install accessories, Install a

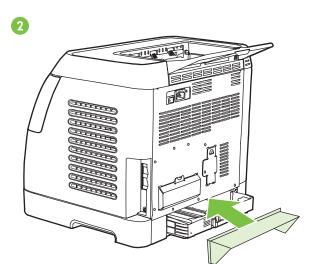


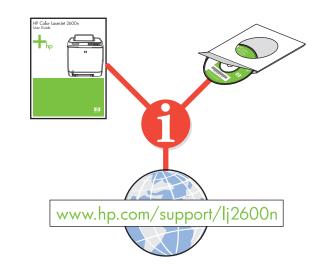


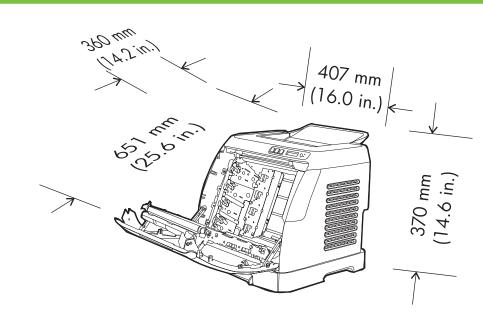






2 Load all paper trays, Load all paper trays

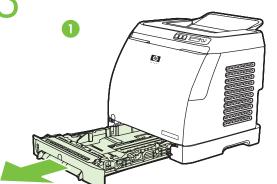

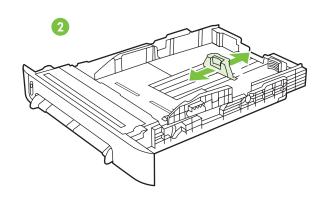


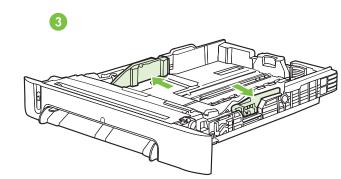


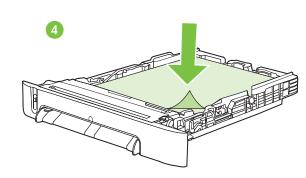


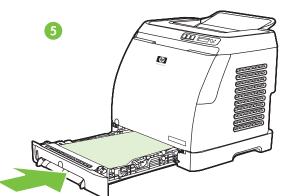



Install toner, Install toner, Install toner, Install toner, Install toner, Install toner, Install toner

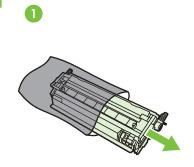


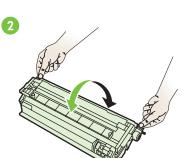

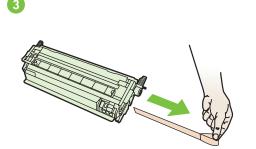


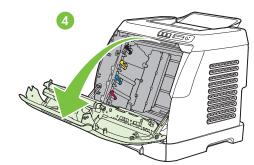

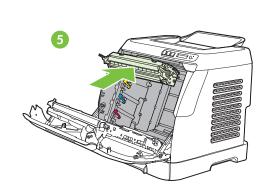


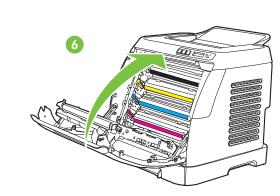

Connect power, Connect power, Connect poiwer, Connect power, Connect power, Connect power, Connect power,

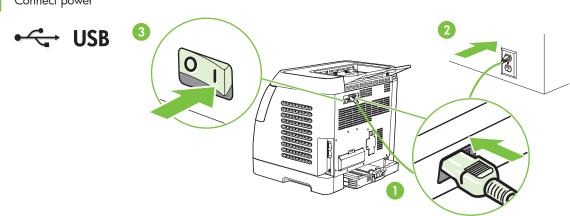

 Print configuration page, Print configuration page







Install software, Install software




If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM. If the Welcome screen does not open, double-click on setup.exe on the CD-ROM.

Choose connection, Choose connec


← USB



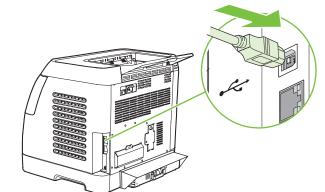

Connect LAN (optional), Connect LAN (optional),



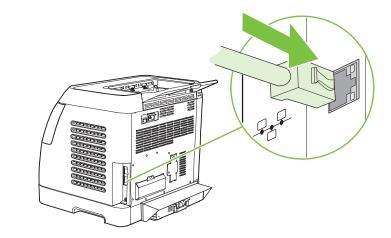

Connect power, Connec



. ΙΔΙ

